

Installation Guide for Model MH Diffuser Box




Locate collar removal slots. If using smallest collar size, collar removal is unneccessary, skip to step 5.



Place flat screwdriver head into the appropriote slot to remove unneeded collar(s).




Twist screwdriver to innitiate separation of unneeded collar section(s).

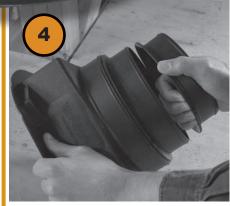

Grasp unneeded collar section(s) behind separation slot and pull firmly.



If furring or strapping for drywall is in use, position MH against framing member with pictured stand-offs contacting underside of framing member.

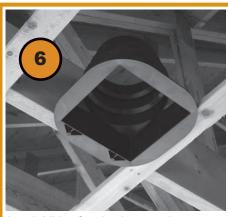

Attach MH to framing by screwing through provided openings below stand-offs.

IMPORTANT

If strapping is not in use and drywall will be affixed directly to framing, position MH against framing with stand-offs on opposite side. Screw through flange or inside of MH housing into framing member.

The buyer of the aforelisted product(s) hereby indemnify Airtec Products Corporation, its successors and assigns, as they may in time appear, harmless against any claims, demands or liability arising out of the misuse of or from any use outside the intended scope of the aforelisted product(s). Misuse or use outside the intended scope shall include any use contrary to that which is indicated with the accompanying literature and instructions. This unit must be installed in accordance with all applicable local building and mechanical codes.

