



EFC Series fan coil controller

### Features:

- Used to program/configure the EFC Fan Coil controller
- Attractive modern look with large LCD and backlight
- Icons driven information and 1 line of text information
- 3 wire or RJ45 Ethernet cable between thermostat & EFC
- Programmable analog & digital outputs
- Selectable fan speed contacts
- Selectable Fahrenheit or Celsius scale
- Occupancy sensor (programmable)
- Multi level lockable access menu
- Selectable internal or external temperature sensor
- Programmable proportional control band & dead band
- Change over by contact or external temperature sensor available
- Anti-freeze protection
- BACnet<sup>®</sup> MS/TP @ 9600, 19200, 38400, 76800bps
- Selectable MAC Address by dip switch on the EFCB
- Selectable device instance via technician menu

TFL54  
TFL55

Technical Data	TFL54	TFL55
<b>Electrical connection</b>	3 wire cable	RJ45 (Ethernet cable)
<b>Power supply</b>	From EFC	
<b>Power consumption</b>	1 VA	
<b>Setpoint range</b>	10°C to 40°C [50°F to 104°F]	
<b>Display resolution</b>	±0.1°C [0.2°F]	
<b>Control accuracy</b>	Temperature: ±0.5°C [0.9°F] @ 22°C [71.6°F] typical calibrated	
<b>Proportional band</b>	0.5°C to 5°C [1°F to 10°F] adjustable	
<b>Operating temperature</b>	0°C to 50°C [32°F to 122°F]	
<b>Storage temperature</b>	-30°C to 50°C [-22°F to 122°F]	
<b>Relative humidity</b>	5 to 95 % non condensing	
<b>Housing degree of protection</b>	IP 30 (EN 60529)	
<b>Weight</b>	80 g. [0.15 lb]	
<b>Note</b>	The TFL5x can only work with the EFC. All the inputs/outputs are located on the EFC except for the temperature sensor built-in the TFL5x.	

### Interface


Display Symbols						
		<b>Cooling ON</b> 100% output A: Automatic		<b>Menu set-up lock</b>		<b>Energy saving mode</b>
		<b>Heating ON</b> 100% output A: Automatic		<b>Programming mode (Technician setting)</b>		°C or °F °C: Celsius scale °F: Fahrenheit scale
		<b>Fan ON</b> 100% output A: Automatic		<b>Alarm status</b>		<b>MIN/MAX</b> Minimum/Maximum setpoints

### Dimensions


	<b>Dimension</b>	<b>Imperial (in)</b>	<b>Metric (mm)</b>
	<b>A</b>	3.00	78
	<b>B</b>	3.00	78
	<b>C</b>	1.00	24
	<b>D</b>	2.36	60

Mounting Instructions

**TFL54:**

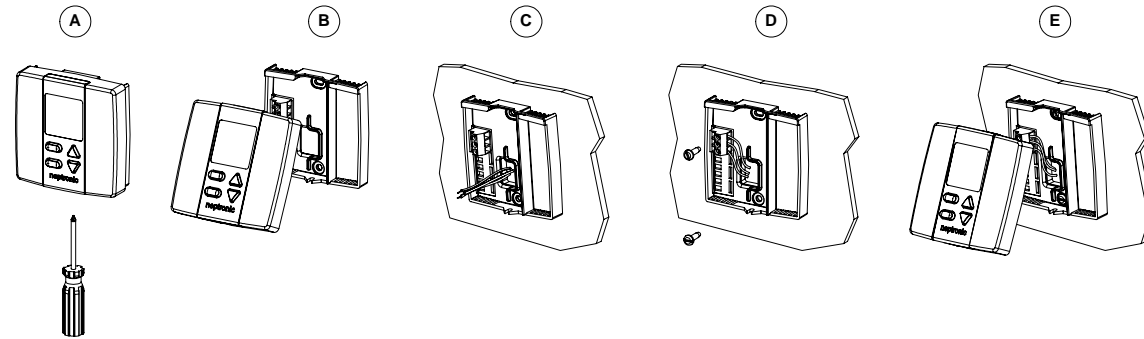

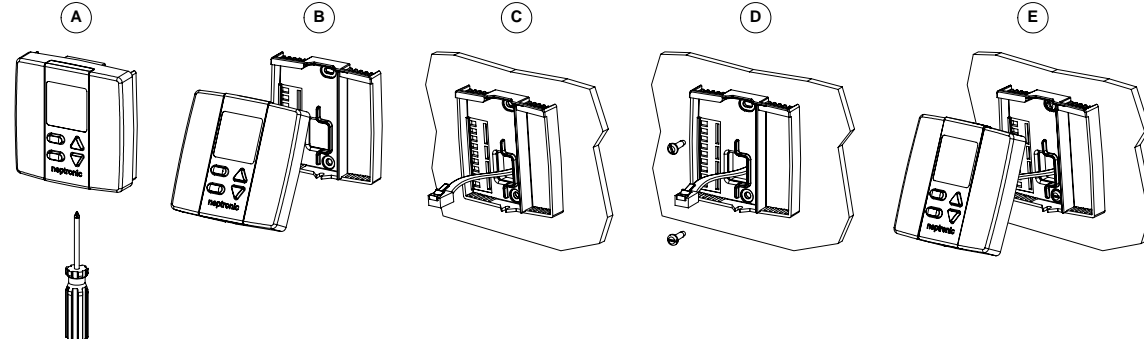



**TFL55:**








**CAUTION:** Risk of malfunction. Remove power prior to separate thermostat cover (control module) from its base.



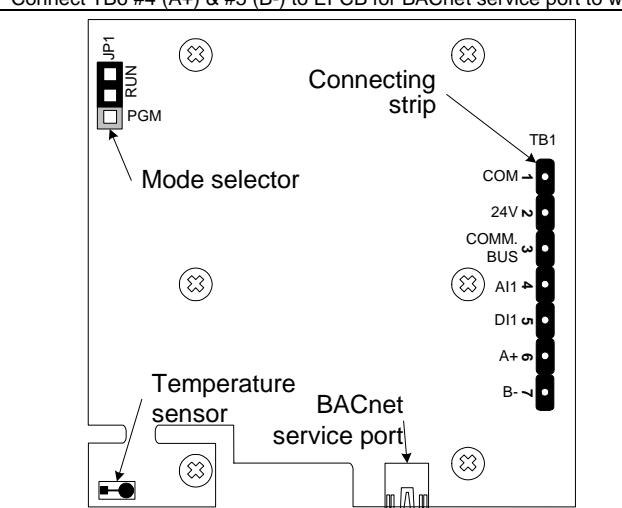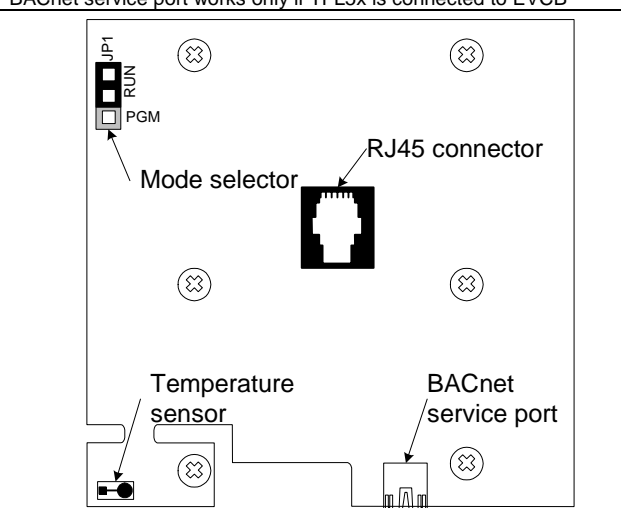




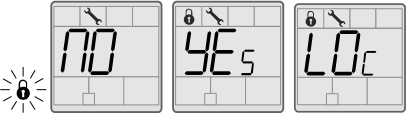
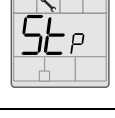




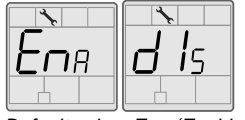


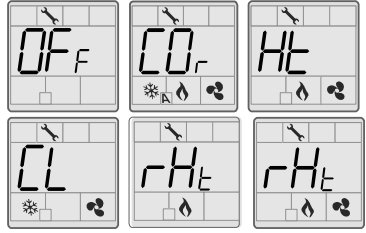

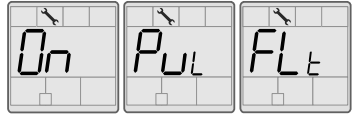
- Remove the screw (captive) holding the base and the front cover of the thermostat.
- Lift the front cover of the thermostat to separate it from the base.
- Pull the cable through the base hole.
- Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- Mount the control module on the base and secure using the screw (from step A).

Settings on PC Board & Connections

Mode Selection (JP1)	
 <p><b>Jumper (JP1) on RUN:</b> Thermostat is in <b>Operation Mode</b>. Thermostat must be set in this mode to operate properly. If not locked, setpoint, fan speed and control mode (Heating &amp; Cooling ON, Cooling only ON or Heating only ON) can be modified by end user.</p>	 <p><b>Jumper (JP1) on PGM:</b> Thermostat is set in <b>Programming Mode</b>. Refer to following section about all settings description</p>
<p>TFL54 – 3 wire cable (TB5 #1, 2 &amp; 3) Connect TB6 #4 (A+) &amp; #5 (B-) to EFCB for BACnet service port to work</p>	<p>TFL55 – RJ45 Ethernet cable BACnet service port works only if TFL5x is connected to EVCB</p>
	

## Programming Mode

When in this mode the  symbol is displayed. Press on  to advance to the next program function, press on button  to return to the previous function and press on button  or  to change values. You can exit the programming mode at any time, changed values will automatically be recorded.

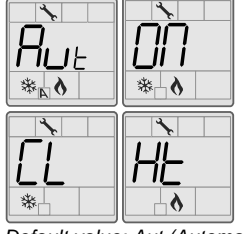Step	Display	Description	Values
1		<b>Internal temperature sensor calibration:</b> Display scrolls between "tS1" and temperature read by internal temperature sensor. You can adjust the calibration of the sensor by comparison with a known thermometer. For example if thermostat has been installed in an area where temperature is slightly different than the typical room temperature (thermostat placed right under the air diffuser).	 Range : 5 to 45°C [41 to 113°F] Increment: 0.1°C [0.2°F] (max offset ± 5°C) (Factory calibrated)
2		<b>Minimum setpoint:</b> Display scrolls between "StP" and the minimum setpoint temperature. MIN symbol is also displayed. Select the desired minimum setpoint temperature.  The minimum value is restricted by the maximum value (step #3).	 Minimum range: 10 to 40°C [50 to 104°F] Increment: 0.5°C [1°F]  Default value: 15°C [59°F]
3		<b>Maximum setpoint</b> Display scrolls between "StP" and the maximum setpoint temperature. MAX symbol is also displayed. Select the desired maximum setpoint temperature.  The maximum value is restricted by the minimum value (step #2).	 Maximum range 10 to 40°C [50 to 104°F] Increment: 0.5°C [1°F]  Default value: 30°C [86°F]
4		<b>Locking the setpoint :</b> Display scrolls between "LOc" and the selected value. You can lock or unlock the setpoint adjustment by end user. If locked the lock symbol will appear.	 Default value: NO (Unlocked)
5		<b>Adjust setpoint:</b> Display scrolls between "StP" and the temperature setpoint. Select the desired setpoint. It should be within the temperature range. Lock symbol will appear if the setpoint was locked at the previous step.  Setpoint value is restricted by the minimum and maximum value (step 2 & 3).	 Setpoint range : 10 to 40°C [50 to 104°F] Increment: 0.5°C [1°F]  Default value: 22°C [72°F]
6		<b>Adjust the control mode:</b> Display scrolls between "Ctl" and "Aut".  Select which control mode you want to authorize: Automatic (Aut), cooling or heating (ON), heating only (Ht), cooling only (CL).  If you want to authorize this all modes, choose Automatic mode.	 Default value: Aut (Automatic cooling and heating)
7		<b>Set On/Off function enable or disable:</b> Display scrolls between "OFF" and "EnA".  You can enable (EnA) or disable (DIs) the Off mode adjustment by end user.	 Default value: Ena (Enable)
8		<b>Set TO1 signal ramp:</b> Display scrolls between "to1" and the selected ramp. Select the desired ramp for TO1 from the options provided: OFF, CO <sub>r</sub> , Ht, CL, rHt (reheat without fan), rHt (reheat with fan)  Note: The  symbol indicates that the fan outputs will be activated according to the demand.  If you selected "OFF", go directly to step #14	 Default value: OFF (Not used)
9		<b>Set TO1 output signal:</b> Display scrolls between "to1" and "On" Select the desired signal output for to1 output from the options provided: on/off, pulse or floating signal output.  Notes: <ul style="list-style-type: none"> <li>If "FLt" (floating) is selected, the same ramp will be used for TO2. TO1 will be set close and TO2 open.</li> <li>"PUL" available only if you choose Heating or Reheat (with or without fan) at step #8.</li> </ul> If you have selected on/off signal, go directly to step #12. If you have selected pulse signal, go directly to step #14.	 Default value: On (On-Off)

Step	Display	Description	Values
10		<b>Set floating time:</b> (If "FLt" has been selected at step #9) Display scrolls between "FLt" and the floating time value (in seconds).  Select desired value for the floating time signal.	 Range: 15 to 250 sec. Increment: 5 sec.  Default value: 100 sec.
11		<b>Set motor direction:</b> Select the desired direction for the motor, either: Direct "clockwise" (0 to 90°) or Reverse "counter clockwise" (90 to 0°)  <b>Go to step #18.</b>	  Default value: dir (Direct)
12		<b>Set TO1 on-off closing level:</b> (If "On" was selected at step #9) Display scrolls between "t1c" and the value of the close position of the TO1 output. Select the percentage at which you want TO1 to close: x% of demand of the ramp selected at step #8.	 Range: 15 to 80 Increment: 1 %  Default value: 25 (25% of the demand)
13		<b>Set TO1 on-off opening level:</b> (If "On" was selected at step #9) Display scrolls between "t1o" and the value of the open position of the TO1 output. Select the percentage at which you want TO1 to open: x% of demand of the ramp selected at step #8.	 Range: 0 to t1c - 4% Increment: 1 %  Default value: 0 (0% of the demand)
14		<b>Set TO2 signal ramp:</b> Display scrolls between "to2" and the selected ramp. Select the desired ramp for TO2 from the options provided:  OFF, CO <sub>r</sub> , Ht, CL, rHt (reheat without fan), rHt (reheat with fan)  <i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i>  <b>If you selected "OFF", go directly to step #18.</b>	      Default value: Off
15		<b>Set TO2 output signal:</b> Display scrolls between "to2" and "On" Select the desired signal output for TO2 output, either: on/off or pulse signal output.  <i>Note: "Pul" is available only if you choose Heating or Reheat (with or without fan) at step #14.</i>  <b>If you selected pulse signal, go directly to step #18.</b>	  Default value: On (On-Off)
16		<b>Set TO2 on-off closing level:</b> (If "On" was selected at step #15) Display scrolls between "t2c" and the value of the close position of the TO2 output. Select the percentage at which you want TO2 to close: x% of demand of the ramp selected at step #14.	 Range: 15 to 80 Increment: 1 %  Default value: 50 (50% of the demand)
17		<b>Set TO2 on-off opening level:</b> (If "On" was selected at step #15) Display scrolls between "t2o" and the value of the open position of the TO2 output. Select the percentage at which you want TO2 to open: x% of demand of the ramp selected at step #14.	 Range: 0 to t2c - 4% Increment: 1 %  Default value: 25 (25% of the demand)
18		<b>Set TO3 signal ramp:</b> Display scrolls between "to3" and the selected ramp. Select the desired ramp for TO3 from the options provided:  OFF, CO <sub>r</sub> , Ht, CL, rHt (reheat without fan), rHt (reheat with fan)  <i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i>  <b>If you selected "OFF", go directly to step #22.</b>	      Default value: Off
19		<b>Set TO3 output signal:</b> Display scrolls between "to3" and "On" Select the desired signal output for TO3 output, either: on/off or pulse signal output.  <i>Note: "Pul" is available only if you choose Heating or Reheat (with or without fan) at step #18.</i>  <b>If you selected pulse signal, go directly to step #22.</b>	  Default value: On (On-Off)
20		<b>Set TO3 on-off closing level:</b> (If "On" was selected at step #19) Display scrolls between "t3c" and the value of the close position of the TO3 output. Select the percentage at which you want TO3 to close: x% of demand of the ramp selected at step #18.	 Range: 15 to 80 Increment: 1 %  Default value: 80 (80% of the demand)

Step	Display	Description	Values
21		<b>Set TO3 on-off opening level:</b> (If "On" was selected at step #19) Display scrolls between "t3o" and the value of the open position of the TO3 output. Select the percentage at which you want TO3 to open: x% of demand of the ramp selected at step #18.	 Range: 15 to d3c - 4% Increment: 1 %  Default value: 50 (50% of the demand)
22		<b>Set AO1 analog signal ramp:</b> Display scrolls between "Ao1" and the selected ramp. Select the desired ramp for AO1 from the options provided:  OFF, CO <sub>r</sub> , Ht, CL, rHt (without fan) or rHt (with fan).  <i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i>  <b>If you selected "OFF", go directly to step #25.</b>	       Default value: CL (Cooling ramp)
23		<b>Minimum voltage of AO1 output:</b> This menu will only be available if the signal ramp for Ao1 is no set to OFF. Display scrolls between "Ao1" and the value of the minimum position of the AO1 ramp. <b>MIN</b> symbol is also displayed. Please select the desired value of the minimum position of the AO1 ramp. (This is the "zero" value)  The minimum value is restricted by the maximum value (step #24).	 Range: 0.0 to 10.0 Volt Increment: 0.1 Volt  Default value: 0.0 Volt
24		<b>Maximum voltage of AO1 output:</b> This menu will only be available if the signal ramp for Ao1 is no set to OFF. Display scrolls between "Ao1" and the value of the maximum position of the AO1 ramp. <b>MAX</b> symbol is also displayed. Please select the desired value of the minimum position of the AO1 ramp. (This is the "span" value)  The maximum value is restricted by the minimum value (step #23).	 Range: 0.0 to 10.0 Volt Increment: 0.1 Volt  Default value: 10.0 Volt
25		<b>Set AO2 analog signal ramp:</b> Display scrolls between "Ao2" and the selected ramp. Select the desired ramp for AO2 from the options provided.  OFF, CO <sub>r</sub> , Ht, CL, rHt (without fan), rHt (with fan) or FAn.  <i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i>  <b>If you selected "OFF", go directly to step #28.</b>	        Default value: OFF
26		<b>Minimum voltage of AO2 output:</b> This menu will only be available if the signal ramp for Ao2 is not set to OFF. Display scrolls between "Ao2" and the value of the minimum position of the AO2 ramp. <b>MIN</b> symbol is also displayed. Select the desired value of the minimum position of the AO2 ramp. (This is the "zero" value)  The minimum value is restricted by the maximum value (step #27).	 Range: 0.0 to 10.0 Volt Increment: 0.1 Volt  Default value: 0.0 Volt
27		<b>Maximum voltage of AO2 output:</b> This menu will only be available if the signal ramp for Ao2 is not set to OFF. Display scrolls between "Ao2" and the value of the maximum position of the AO2 ramp. <b>MAX</b> symbol is also displayed. Select the desired value of the minimum position of the AO2 ramp. (This is the "span" value)  The maximum value is restricted by the minimum value (step #26).	 Range: 0.0 to 10.0 Volt Increment: 0.1 Volt  Default value: 10.0 Volt
28*		<b>Set DO1 digital output ramp:</b> Display scrolls between "dO1" and the selected ramp. Select the desired ramp for on DO1 from the options provided:  OFF, CO <sub>r</sub> , Ht, CL, rHt (without fan) or rHt (with fan).  <i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i>  <b>If you selected "OFF", go directly to step #32.</b>	       Default value: Ht (Heating ramp)
29*		<b>Set DO1 closing delay:</b> Display scrolls between "dO1" and programmed closing delay for the DO1 output. <b>MIN</b> symbol is also displayed.  This is the delay (in minutes) before the output is activated.	 Range: 0 to 15 min Increment: 1 min  Default value: 0 min



















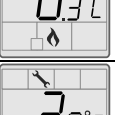
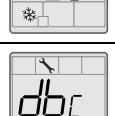
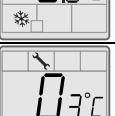
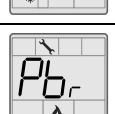
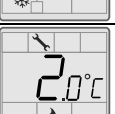







\*Only on selected models

Step	Display	Description	Values
30*		<p><b>Set DO1 closing level:</b> Display scrolls between “d1c” and the value of the close position of the DO1 output.</p> <p>Select the percentage of the demand at which you want DO1 to close based on the demand of the selected ramp at step #28.</p>	 Range: 15 to 80% Increment: 1 % <i>Default value: 25 (25% of the demand)</i>
31*		<p><b>Set DO1 opening level:</b> Display scrolls between “d1o” and the value of the open position of the DO1 output.</p> <p>Select the percentage of the demand at which you want DO1 to open based on the demand of the selected ramp at step #28.</p>	 Range: 0 to d1c - 4% Increment: 1 % <i>Default value: 0 (0% of the demand)</i>
32*		<p><b>Set DO2 digital output ramp:</b> Display scrolls between “do2” and the selected ramp. Select the desired ramp for on DO2 from the options provided: OFF, CO<sub>r</sub>, Ht, CL, rHt (without fan) or rHt (with fan).</p> <p><i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i></p> <p><b>If you selected “OFF”, go directly to step #36.</b></p>	 <i>Default value: Ht (Heating ramp)</i>
33*		<p><b>Set DO2 closing delay:</b> Display scrolls between “do2” and programmed closing delay for the DO2 output. MIN symbol is also displayed.</p> <p>This is the delay (in minutes) before the output is activated.</p>	 Range: 0 to 15 min Increment: 1 min <i>Default value: 0 min</i>
34*		<p><b>Set DO2 closing level:</b> Display scrolls between “d2c” and the value of the close position of the DO2 output.</p> <p>Select the percentage of the demand at which you want DO2 to close based on the demand of the selected ramp at step #32.</p>	 Range: 15 to 80% Increment: 1 % <i>Default value: 50 (50% of the demand)</i>
35*		<p><b>Set DO2 opening level:</b> Display scrolls between “d2o” and the value of the open position of the DO2 output.</p> <p>Select the percentage of the demand at which you want DO2 to open based on the demand of the selected ramp at step #32.</p>	 Range: 0 to d2c - 4% Increment: 1 % <i>Default value: 25 (25% of the demand)</i>
36*		<p><b>Set DO3 digital output ramp:</b> Display scrolls between “do3” and the selected ramp. Select which ramp you want for on DO3. OFF, CO<sub>r</sub>, Ht, CL, rHt (without fan) or rHt (with fan).</p> <p><i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i></p> <p><b>If you selected “OFF”, go directly to step #37.</b></p>	 <i>Default value: Ht (Heating ramp)</i>
37*		<p><b>Set DO3 closing delay:</b> Display scrolls between “do3” and programmed closing delay for the DO3 output. MIN symbol is also displayed.</p> <p>This is the delay (in minutes) before the output is activated.</p>	 Range: 0 to 15 min Increment: 1 min <i>Default value: 0 min</i>
38*		<p><b>Set DO3 closing level:</b> Display scrolls between “d3c” and the value of the close position of the DO3 output.</p> <p>Select the percentage of the demand at which you want DO3 to close based on the demand of the selected ramp at step #36.</p>	 Range: 15 to 80% Increment: 1 % <i>Default value: 80 (80% of the demand)</i>
39*		<p><b>Set DO3 opening level:</b> Display scrolls between “d3o” and the value of the open position of the DO3 output.</p> <p>Select the percentage of the demand at which you want DO3 to open based on the demand of the selected ramp at step #36.</p>	 Range: 0 to d3c - 4% Increment: 1 % <i>Default value: 50 (50% of the demand)</i>
40*		<p><b>Set DO4 digital output ramp:</b> Display scrolls between “do4” and the selected ramp. Select which ramp you want for on DO4. OFF, Change over (CO<sub>r</sub>), CO<sub>r</sub>, Ht, CL, rHt (without fan) or rHt (with fan).</p> <p><i>Note: The  symbol indicates that the fan outputs will be activated according to the demand.</i></p> <p><b>If you selected “OFF”, go directly to step #44.</b></p>	 <i>Default value: CL (Cooling ramp)</i>

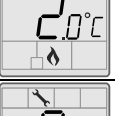\*Only on selected models

Step	Display	Description	Values
41*		<b>Set DO4 closing delay:</b> Display scrolls between "d04" and programmed closing delay for the DO4 output. MIN symbol is also displayed.  This is the delay (in minutes) before the output is activated.	 Range: 0 to 15 min Increment: 1 min  Default value: 0 min
42*		<b>Set DO4 closing level:</b> Display scrolls between "d4c" and the value of the close position of the DO4 output.  Select the percentage of the demand at which you want DO4 to close based on the demand of the selected ramp at step #40.	 Range: 15 to 80% Increment: 1 %  Default value: 20 (20% of the demand)
43*		<b>Set DO4 opening level:</b> Display scrolls between "d4o" and the value of the open position of the DO4 output.  Select the percentage of the demand at which you want DO4 to open based on the demand of the selected ramp at step #40.	 Range: 0 to d4c - 4% Increment: 1 %  Default value: 0 (0% of the demand)
44		<b>Internal or external temperature sensor selection:</b> Display scrolls between "tS" and "In" or "out".  Please select internal (In) or external sensor (Out).  <b>If you selected "In", go directly to step #46.</b>	 Default value: In (Internal temperature sensor)
45		<b>External temperature sensor calibration (AI1):</b> This option is only available if "tS" (step 44) is set to "out".  Display scrolls between "EtS" and the temperature read by the external temperature sensor (if connected). You can adjust the calibration of the external sensor by comparison with a known thermometer.  If the sensor is not connected or short circuited, the display shows "--".	 Range: 5 to 45°C [41 to 113.0°F] (max. offset ± 5 °C) Increment: 0.1°C [0.2°F]
46		<b>Change over mode selection (AI2):</b> Display scrolls between "CO" and the selected value. Select the change over mode: normally cool, normally heat or external sensor. If normally cool "nC" is selected, heating mode will be activated upon closing of AI2 contact. If normally heat "nH" is selected, cooling mode will be activated upon closing of AI2 contact. If external sensor "SS" is selected, heating mode will be activated when temperature read by external sensor is above the change over setpoint "tCo" and cooling mode will be activated when temperature read by external sensor is under "tCo", see step #47. If "SS" is not selected, go directly to step #48.	 Default value: SS (External sensor)
47		<b>Change over setpoint temperature:</b> (If "SS" was selected at step #46) Display scrolls between "tCo" and the change over setpoint temperature. Select the change over setpoint temperature.  <i>Note: Heating mode will be activated when temperature read by external sensor is above the change over setpoint temperature "tCo", and cooling mode will be activated when temperature read by external sensor is under "tCo".</i>	 Range: 10 to 40°C [50 to 104°F] Increment: 0.5°C [1°F]  Default value: 24°C [75°F]
48		<b>Flow switch (DI1):</b> Display scrolls between "FLs" and the selected setting. Please select normally close "NC" or normally open "NO".  The Δ symbol will come on in operation mode if the contact input changes state.	 Default value: NO (Normally open)
49		<b>Dirty filter (DI2):</b> Display scrolls between "dFt" and the selected setting. Please select normally close "NC" or normally open "NO".  The Δ symbol will come on in operation mode if the contact input changes state.	 Default value: NO (Normally open)
50		<b>Set DI3 input signal:</b> Display shows "dI3" and the selected value. Moon ☾ symbol is also displayed.  You can choose: <ul style="list-style-type: none"> <li>• nb.o (Night set back, normally open) contact,</li> <li>• nb.c (Night set back, normally close) contact,</li> <li>• oC.o (Occupancy, normally open) contact or</li> <li>• oC.c (Occupancy, normally close) contact.</li> <li>• OFF (input not used)</li> </ul> <b>If you selected Night Set Back, go directly to step #53.</b> <b>If you selected OFF, go directly to step #57.</b>	 Default value: oC.o (Occupancy, normally open)
51		<b>No occupancy delay:</b> Display scrolls between "oCs" and the selected delay value (in minutes). Moon ☾ symbol is also displayed. Input the delay before No Occupancy is activated, once the occupancy sensor is triggered.	 Range: 0 to 240 min Increment: 1 min  Default value: 30 min

\*Only on selected models









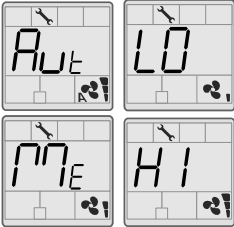







Step	Display	Description	Values
52		<b>Maximum occupancy override delay (DI3):</b> Display scrolls between "oCt" and the selected delay value (in minutes). Moon ☾ symbol is also displayed. Input the maximum delay available to the user.  When in no occupancy mode, the user can press the  button to override. Each time he press it, the override delay will increase by 15 min until it reaches the value set here. <b>Go to step #55</b>	 Range: 0 to 180 min Increment: 15 min  <i>Default value: 120 min</i>
53		<b>Night set back mode:</b> Select if you want to enable heating/cooling set point and override when in night set back by choosing "StP" or "OFF" to have all outputs turned off when in night set back.  <b>If you selected Off, go directly to step #57.</b>	 <i>Default value: StP (Set point/override enabled)</i>
54		<b>Night set back override time (DI3):</b> Display shows "NSb" and the override time in minute. NSB ☾ symbol is also displayed. Select the desired override time, if no override time is desired select "0".	 Range: 0 to 180 min. Increment: 15 min.  <i>Default value: 120 min.</i>
55		<b>Night set back or no occupancy heating setpoint:</b> Display scrolls between "StP" and the selected setpoint. Moon ☾ symbol is also displayed. Select the desired no occupancy heating setpoint temperature.  This value is restricted by the no occupancy cooling value (step #56).	 Setpoint range: 10 to 40°C [50 to 104°F] Increment: 0.5°C [1°F]  <i>Default value: 16°C [61°F]</i>
56		<b>Night set back or no occupancy cooling setpoint:</b> Display scrolls between "StP" and the selected setpoint. Moon ☾ symbol is also displayed. Select the desired no occupancy cooling setpoint temperature.  This value is restricted by the no occupancy heating value (step #55).	 Setpoint range: 10 to 40°C [50 to 104°F] Increment: 0.5°C [1°F]  <i>Default value: 28°C [82°F]</i>
57		<b>Proportional band for change over:</b> Display scrolls between "Pbo" and the value of the change over proportional band, change over symbols is also displayed.  Select the desired value for the change over proportional band.	 Proportional band range: 0.5 to 5.0°C [1 to 10°F] Increment: 0.5°C [1°F]  <i>Default value: 2.0°C [4°F]</i>
58		<b>Dead band for change over:</b> Display scrolls between "dbo" and the value of the change over dead band, change over symbols are also displayed.  Select the desired value for the change over dead band.	 Dead band range: 0.3 to 5.0°C [0.6 to 10.0°F] Increment: 0.1°C [0.2°F]  <i>Default value: 0.3°C [0.6°F]</i>
59		<b>Proportional band for heating:</b> Display scrolls between "PbH" and the value of the heating proportional band, heating symbol is also displayed.  Select the desired value for heating proportional band.	 Proportional band range: 0.5 to 5.0°C [1 to 10°F] Increment: 0.5°C [1°F]  <i>Default value: 2.0°C [4°F]</i>
60		<b>Dead band for heating:</b> Display scrolls between "dbH" and the value of the heating dead band, heating symbol is also displayed.  Select the desired value for the heating dead band.	 Dead band range: 0.0 to 5.0°C [0.0 to 10.0°F] Increment: 0.1°C [0.2°F]  <i>Default value: 0.3°C [0.6°F]</i>
61		<b>Proportional band for cooling:</b> Display scrolls between "Pbc" and the value of the cooling proportional band, cooling symbol is also displayed.  Select the desired value for cooling proportional band.	 Proportional band range: 0.5 to 5.0°C [1 to 10°F] Increment: 0.5°C [1°F]  <i>Default value: 2.0°C [4°F]</i>
62		<b>Dead band for cooling:</b> Display scrolls between "dbc" and the value of the cooling dead band, cooling symbol is also displayed.  Select the desired value for the cooling dead band.	 Dead band range: 0.0 to 5.0°C [0.0 to 10.0°F] Increment: 0.1°C [0.2°F]  <i>Default value: 0.3°C [0.6°F]</i>
63		<b>Proportional band for reheat (with or without fan):</b> Display scrolls between "Pbr" and the value of the reheat proportional band, reheat symbol is also displayed.  Select the desired value for reheat proportional band.	 Proportional band range: 0.5 to 5.0°C [1 to 10°F] Increment: 0.5°C [1°F]  <i>Default value: 2.0°C [4°F]</i>
64		<b>Dead band for reheat (with or without fan):</b> Display scrolls between "dbr" and the value of the reheat dead band, reheat symbols is also displayed.  Select the desired value for reheat dead band.	 Dead band range : 0.0 to 5.0°C [0.0 to 10.0°F] Increment: 0.1°C [0.2°F]  <i>Default value: 0.3°C [0.6°F]</i>
65		<b>Set fan speed automatic mode enable or disable:</b> Display scrolls between "FAn" and "EnA". Fan  symbol is also displayed. You can enable or disable the Automatic mode adjustment by end user. If you selected to disable the automatic mode, <b>go directly to step #67.</b>	 <i>Default value: EnA (Enable)</i>

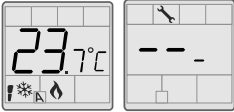

Step	Display	Description	Values
66		<b>Time out fan contact:</b> Display scrolls between "Fto" and the automatic shutoff delay value (in minutes) when there is no demand. MIN and fan icons are also displayed. Select the desired value for the automatic shutoff delay. <b>If you selected "FAn" for AO2 at step #25, go directly to step #68.</b>	 Range: 0 to 255 sec. Increment: 1 sec. <i>Default value: 120 sec.</i>
67		<b>Fan speed contact:</b> Display scrolls between "FAn" and "SPd" and the speed of the fan. Fan icon symbol is also displayed. Select which speed contact you want: speed 1, speed 2 or speed 3.	 <i>Default value: 3 (Hi speed)</i>
68		<b>Fan damping factor:</b> Display scrolls between "FdF" and the selected delay value (in seconds). Fan icon symbol is also displayed.  Select the damping factor for the fan.	 Range: 0 to 10 sec. Increment: 1 sec. <i>Default value: 0 sec.</i>
69		<b>Anti-cycling delay cooling contact (protection for compressor):</b> Display scrolls between "Cyc" and the value (in minutes) of the delay to activate/reactivate cooling contact. The MIN symbol is also displayed.  Select the desired value for the delay cooling contact.	 Range: 0 to 15 min. Increment: 1 min. <i>Default value: 2 min.</i>
70		<b>Integration time factor for heating:</b> Display scrolls between "Int" and the time in seconds for the integration factor compensation. Heating symbol is also displayed.  Select the desired value for the integration factor compensation.	 Range: 0 to 250 seconds Increment: 5 seconds <i>Default value: 0 seconds</i>
71		<b>Integration time factor for cooling:</b> Display scrolls between "Int" and the time in seconds for the integration factor compensation. Cooling symbol is also displayed.  Select the desired value for the integration factor compensation.	 Range: 0 to 250 seconds Increment: 5 seconds <i>Default value: 0 seconds</i>
72		<b>Enable or disable anti-freeze protection:</b> Display scrolls between "FrE" and the selected setting. You can enable or disable the anti-freeze function. When enabled, if temperature drops to 4°C [39°F], heat and reheat will start even if thermostat is in OFF mode. Heat and reheat will stop when temperature reaches 5°C [41°F].	 <i>Default value: dis (disable)</i>
73 <sup>B</sup>		<b>Communication bauds rate:</b> Display scrolls between "bAu" and the value of the baud rate in kBds. Select the desired bauds for communication: 9.6, 19.2, 38.4, 76.8.	 Range: 9600, 19200, 38400, 76800 <i>Default value: 76.8 kBds</i>
74 <sup>B</sup>		<b>BACnet MAC address:</b> Display scrolls between "Add" and the value of the MAC address.  If dip switches 0 to 7 of DS2 on the EFC are all in the Off position, then you can change the MAC address by using the "Δ" or "∇" buttons.  Each device must have a unique MAC address on a network.	Range: 0 to 127 Default value: 0
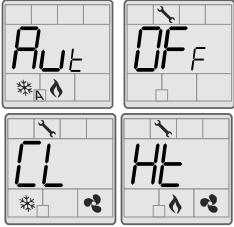
<sup>B</sup>Only on BACnet models

Operation Mode

Step	Description	Display
A	<p>At powering up, thermostat will light display and activate all LCD segments for 2 seconds.</p> <p><b>Illuminating the LCD</b> To illuminate the LCD, simply push <math>\Delta</math> or <math>\nabla</math> buttons. LCD will light for 4 seconds.</p> <p><b>Temperature display</b> In operation mode, thermostat will automatically display temperature read. If "----" and alarm symbol are displayed, the temperature sensor is not connected or short circuited. To change the scale between °C and °F, press on both <math>\Delta</math> and <math>\nabla</math> for 3 seconds.</p>	
B	<p><b>Setpoint display and adjustment:</b> To display the setpoint, press twice on <math>\Delta</math> or <math>\nabla</math>. Setpoint will be displayed for 5 seconds. To adjust setpoint, press on <math>\Delta</math> or <math>\nabla</math> while the temperature setpoint is displayed.</p> <p><i>Note: If setpoint adjustment has been locked,  symbol will be displayed.</i></p>	
C	<p><b>Control mode selection:</b> To change the control mode, press on . Control mode will be displayed for 5 seconds. You can choose one of the following:</p> <ul style="list-style-type: none"> <li>✓ Automatic Cooling or Heating (Aut)</li> <li>✓ OFF (if not disable in programming mode)</li> <li>✓ Cooling only (on, with cooling symbol)</li> <li>✓ Heating only (on, with heating symbol)</li> </ul> <p><i>Note: These selections can vary according to the choice made on step #6 &amp; 7.</i></p>	
D	<p><b>Fan speed mode selection:</b> To change the fan speed mode, press on . Fan speed mode will be displayed for 5 seconds. You can choose one of the following:</p> <ul style="list-style-type: none"> <li>✓ Automatic speed (if not disable in programming mode)</li> <li>✓ Low speed</li> <li>✓ Medium speed</li> <li>✓ High speed</li> </ul> <p><i>Notes:</i></p> <ul style="list-style-type: none"> <li>• These selections can vary according to the choice made in programming steps #65 &amp; 67.</li> <li>• If fan speed mode selection has been locked,  symbol will be displayed.</li> <li>• If in No Occupancy mode, the  button now serves as the override button.</li> </ul>	
E	<p><b>Night set back (NSB) or no occupancy override:</b> When thermostat is in night set back or no occupancy mode, moon symbol  is displayed, so setpoint for cooling and/or heating are increased as per the setting made in programming mode.</p> <p>If not locked, night set back can be overridden for a predetermined period by pressing any of the 4 buttons. During the override period the  symbol will flash. If  does not flash, the override period is finished or the night set back or no occupancy override has been locked in programming mode.</p> <p>If not locked, no occupancy mode can be overridden for a period by pressing the  button. Each time you press the  button, 15 minutes are added to the override. The  will blink and the remaining time to the override will be displayed in minutes.</p>	

Recycling at end of life

	<p>At end of life, please return the thermostat to your Nepronic® local distributor for recycling. If you need to find the nearest Nepronic® authorized distributor, please consult <a href="http://www.nepronic.com">www.nepronic.com</a>.</p>
---	---




### Features:

- Programmable analog & digital outputs
- Selectable fan speed contacts
- Selectable Fahrenheit or Celsius scale
- Occupancy sensor (programmable)
- Selectable internal or external temperature sensor
- Programmable proportional control band & dead band
- Change over by contact or external temperature sensor available
- Anti-freeze protection
- BACnet<sup>®</sup> MS/TP @ 9600, 19200, 38400, 76800bps
- Selectable MAC Address by dip switch on the EFCB

E	F	C	B	1	2	W	Q	4
_: No communication B: BACnet communication								
1: Plastic housing								
0: 24 Vac 1: 120 Vac 2: 240 Vac								
W: 3 wire connection R: RJ45 connection								
_: No extra relays Q: Extra relays								
1: 1 extra 7 amps relay 2: 2 extra 7 amps relays 3: 3 extra 7 amps relays 4: 4 extra 7 amps relays								

Technical Data	EFC
<b>Thermostat connection</b>	RJ45 or 3 wire cable (depending on model)
<b>Power supply</b>	24, 120 or 240 Vac (depending on model)
<b>Transformer output</b>	8 VA max. 24 Vac thermal fused.
<b>Relay output</b>	3 relays standard, up to 4 extra relay
<b>Relay rating</b>	7 amps
<b>Operating temperature</b>	0°C to 50°C [32°F to 122°F]
<b>Storage temperature</b>	-30°C to 50°C [-22°F to 122°F]
<b>Relative humidity</b>	5 to 95 % non condensing
<b>Weight</b>	635 g. [1.4 lb]

### Dimensions

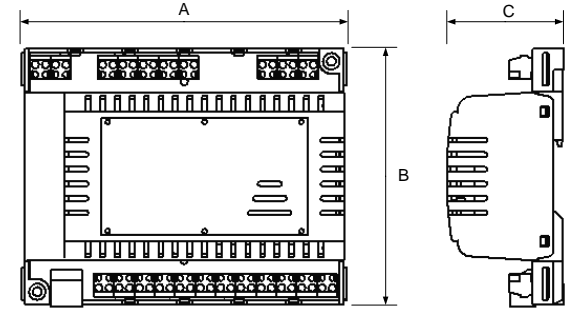

Dimension	Imperial (in)	Metric (mm)
A	6.3	160
B	5	126
C	2.25	57

Terminal Description

**TFL Connection (TB5)**

1- Common
2- 24 Vdc
3- Communication bus
<i>If RJ45 version, simply connect Ethernet cable.</i>

**BACnet Network (TB6)<sup>3</sup>**

1- IN A+
2- IN B-
3- OUT A+
4- OUT B-
<i>NOTE: Always avoid T-taps</i>

**Analog Outputs, 0-10 Vdc (TB7)**

1- Analog Output (AO1)
2- Common (AO1 & AO2)
3- Digital Input 2 (DI2)

**Analog Inputs, Fix (TB8)**

1- External temperature sensor (AI1)
2- Common (AI1 & AI2)
3- Changeover sensor (AI2)

**Analog Inputs, Programmable (TB9)**


1- Analog Input 3 (AI3)
2- Analog Input 4 (AI4)
3- Common
4- Analog Input 5 (AI5)
5- Analog Input 6 (AI6)

**Digital Inputs, Programmable (TB10)**

1- Flow Switch (DI1)
2- Dirty Filter (DI2)
3- Common
4- Occ. Sensor (DI3)
5- Readable over BACnet only (DI4)

**Low Voltage Outputs (TB11)\***

1- Common
2- Common
3- 24 Vac
4- 24 Vac

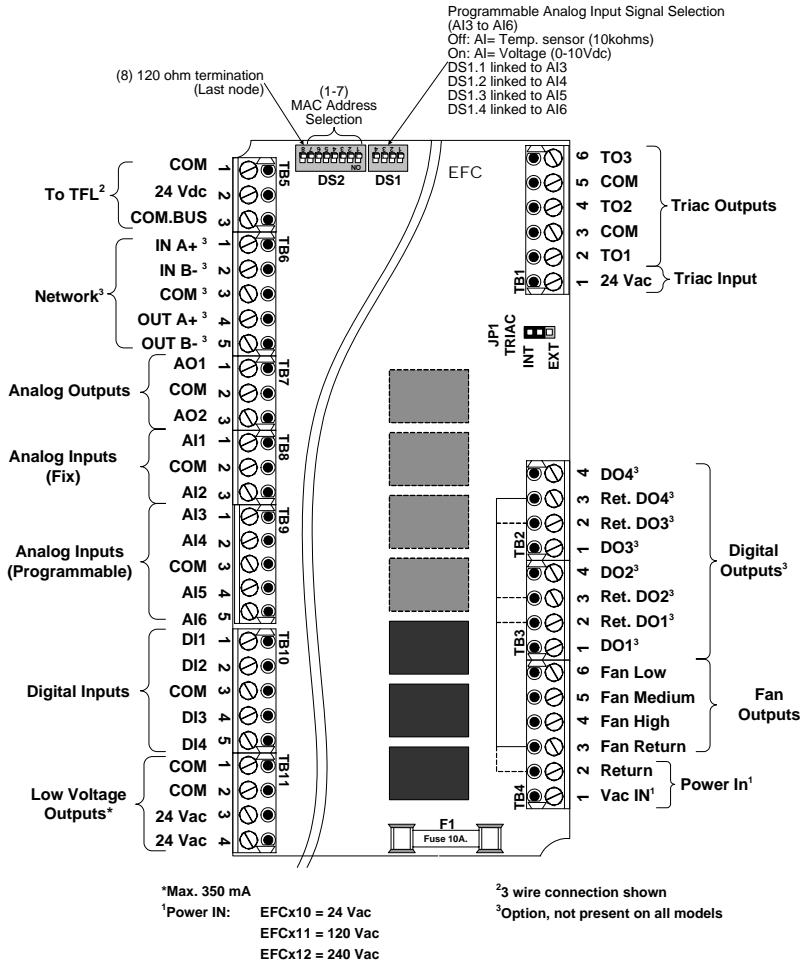

**Triac (TB1)**

1- Triac Input, 24 Vac (JP1)
2- Triac Output 1 (TO1)
3- Common
4- Triac Output 2 (TO2)
5- Common
6- Triac Output 3 (TO3)

**Triac Voltage Selection (JP1)**

If set on EXT, apply 24Vac on pin 1 & 3 of TB1

**Digital Outputs, 7A dry contacts (TB2)<sup>3</sup>**

1- Digital Output 3 (DO3)
2- Return DO3
3- Return DO4
4- Digital Output 4 (DO4)

**Digital Outputs, 7A dry contacts (TB3)<sup>3</sup>**

1- Digital Output 1 (DO1)
2- Return DO1
3- Return DO2
4- Digital Output 2 (DO2)

**Power In (TB4)<sup>1</sup>**

1- Vac IN
2- Return
<i>NOTE: Make sure to apply corresponding voltage to your model (24 Vac, 120 Vac or 240 Vac).</i>

**Fan Outputs, 7A dry contacts (TB4)**

3- Return
4- High speed
5- Medium speed
6- Low speed

Recycling at end of life

	At end of life, please return the thermostat to your Nepronic® local distributor for recycling. If you need to find the nearest Nepronic® authorized distributor, please consult <a href="http://www.nepronic.com">www.nepronic.com</a> .
--	---